


My_NB APP (Android)

INITIAL SETUP

Minimum System Requirement (Mobile Device): Android 4

Installing the APP


Use the "my_NB" keyword to search for the My_NB app from **Google Play Store**. Then follow the on-screen instructions to download and install the App to your mobile device.

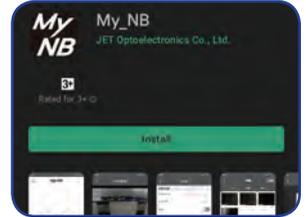

Connecting the Device to the App

- 1 On the camera, press and hold the  button for 3 seconds to switch to the Wi-Fi mode. Once the Wi-Fi mode is activated, the SSID and password will appear on the screen.

Wi-Fi mode is activated


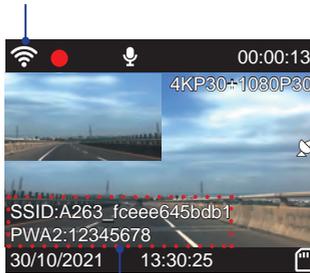


SSID and Password Info

- 2 On your mobile device, launch **Settings**. Then enable the Wi-Fi function.
- 3 Select A263_XXXXXXXXXX and enter the password. Then tap **CONNECT** to connect to the camera.

NOTE:

The default password is "12345678". To change the SSID or password, refer to "Wi-Fi Setting" on page 41.

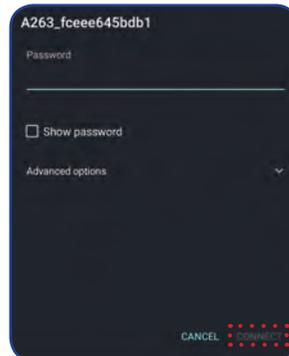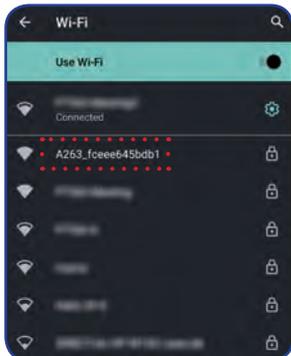


Once the connection is established, the Wi-Fi icon (📶) turns green. The SSID and password will disappear from the screen.



USING THE APP

Overview

- 1 On your mobile device, tap the  icon to launch the My_NB app.
- 2 Tap **CONNECT YOUR CAMERA** to enter the main screen. The live view is displayed on the screen.

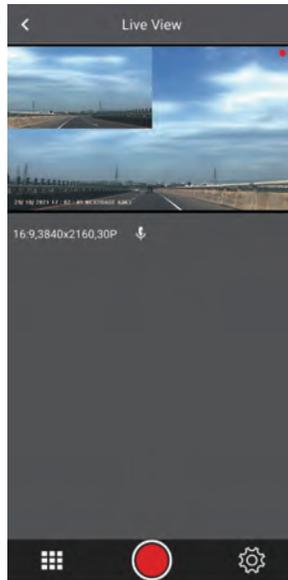


To stop the video recording, tap . To continue, tap .

Viewing the Recorded Files

NOTE:

Before accessing the files, make sure to stop the video recording first. Otherwise, the reminder message will appear shortly on the screen.

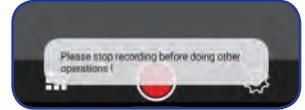

To view the recorded videos:

- 1 On the bottom panel, tap .




- 2 Select the video category (**Video** or **Emergency** tab) that you want to view.



- 3 Select the desired video. Then tap  to start the play the video.

- To pause during playback, tap . Then tap  to resume.
- To exit the playback screen, tap **Done**.

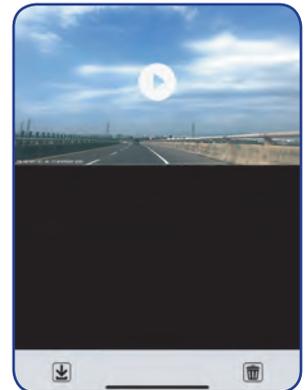


To view the recorded photos:

- 1 On the bottom panel, tap . Then select the **Photo** tab.



- 2 Select the desired photo that you want to view.

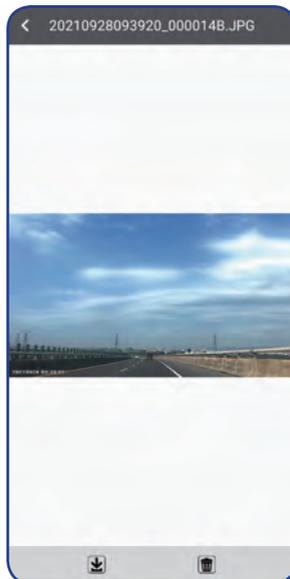


Managing the Recorded Files

NOTE:


Before accessing the files, make sure to stop the video recording first. Otherwise, the reminder message will appear shortly on the screen.

To save the file(s) to your mobile device:

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap and select the file(s) that you want to download. Then tap  to download the selected file(s).

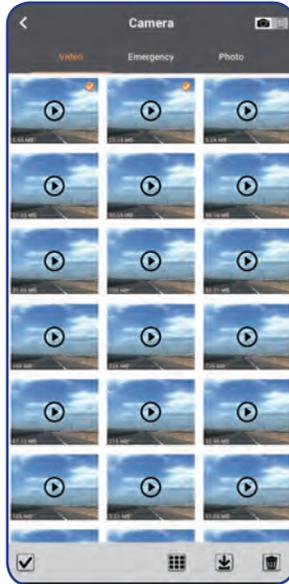

After the saving process is complete, a "Download completed" message will appear shortly on the screen.

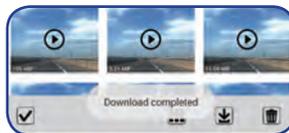

NOTE:

You can also directly save the file while viewing the photo/video. Simply tap  to save the file.

To save all files to your mobile device:

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap . Then tap  to select all files.



NOTE:

To deselect the files, tap  again.

- 3 Tap , to download all files.
After the saving process is complete, a "Download completed" message will appear shortly on the screen.

To browse the downloaded files:


- 1 On the bottom panel, tap . Then tap  (on the top-right panel).
- 2 Select the video category (**Video** or **Emergency** tab) or **Photo** tab.



- 3 Select the file that you want to view.


NOTE:

To delete the file, tap . When a confirmation message appears, tap **DELETE** to continue.

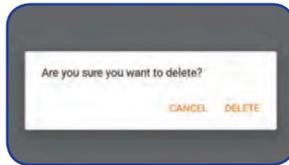


To delete the file(s):

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap and select the file(s) that you want to delete. Then tap  to delete the selected file(s).
- 3 A confirmation message will appear on the screen. Tap **DELETE** to confirm the deletion.

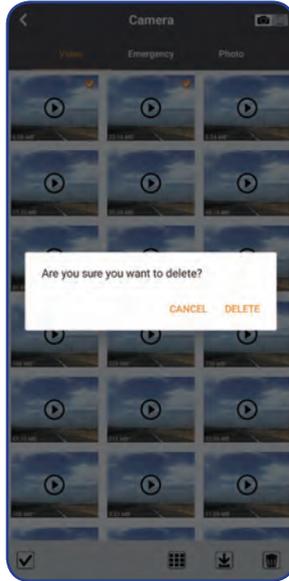

To delete all files:

- 1 On the bottom panel, tap . Then select the video category (**Video** or **Emergency** tab) or **Photo** tab.
- 2 Tap . Then tap  to select all files.
- 3 Tap  to delete all files.
- 4 A confirmation message will appear on the screen. Tap **DELETE** to confirm the deletion.

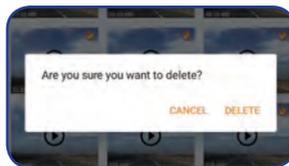

Configuring the Device Settings

NOTE:

Before configuring the device settings, make sure to stop the video recording first. Otherwise, the reminder message will appear shortly on the screen.

To configure the video or system related settings:

On the bottom panel, tap . Then select the desired option and adjust the necessary settings.



Menu Option	Description
Video Resolution	Select the recording resolution.
Loop Recording	Select the recording time for the individual video files.
Recording Audio	Turn on/off the microphone for video recording.
Motion Detection	Enable/disable the motion detection function.
G-Sensor	Select the sensitivity level of the G-Sensor.
Date Stamp	Turn on/off the date stamp shown on the recorded files.
Date/Time	Sync the camera to your mobile device to automatically update the date and time settings.
Speed Unit	Select whether to record and display speed in KM/H or MPH.
Screen Saver	Turn on the Screen Saver function to turn off the screen after a chosen period of inactivity.
Frequency	Set the frequency setting according to the power supply specification used in your country or geographical region.

Menu Option	Description
Wi-Fi Setting	<p>Change the Wi-Fi network name (SSID) and the password.</p> 
Available Memory Space	View the remaining storage space on the microSD card.
Format SD Card	Format the inserted microSD card.
Reset Camera Setting	Reset the camera to the factory default settings.
App Version	Display the app version number.
Firmware Version	Display the version number of the currently installed firmware.