

Instruction Manual



X-Premium

Professional Automotive Rear Seat Entertainment System

Regulatory Statements

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: Z3K-X10674011A

Z3K-X20674012A

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

IC Caution:

RSS-Gen Issue 5 April 2018”&”CNR-Gen 5e April 2018:

- **English:**

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- **French:**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'encompromettre le fonctionnement.

CE Compliance Statement

1) Use only power supplies listed in the user instructions. Adapter Model(s): TEKA024-1202000UK or TEKA024-1202000EU, Made By: SHENZHEN TEKA TECHNOLOGY CO., LTD

2) WARNING:


Do not ingest the battery, Chemical Burn Hazard

(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- 3)  To prevent possible hearing damage, do not listen at high volume levels for long periods.

RED

This device meets the EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

GMS

Google, Android, Google Play, Youtube and other marks are trademarks of Google LLC.

WEEE Compliance Statement



This symbol on the product or on the packaging indicates that this can not be disposed of as household waste. You must dispose of your waste equipment and/or battery by handing it over to the applicable take-back scheme for the recycling of electronic equipment and/or battery. For more information please contact your local household waste disposal office.

Safety Instructions

Read through this manual carefully and observe the following safety instructions before operating this device.

- Use only the car power cable and accessories supplied by dealer. Use of unauthorized accessories may void the warranty.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other equipment (including amplifiers) that produce heat.
- Keep this device away from water, drinks, or all types of liquids.
- Do not drop or apply excessive force to this device.
- Disconnect this device from the power supply when not in use.
- It is forbidden by law to duplicate, broadcast, play in public, or rent copyrighted material without permission.
- Do not use alcohol based products to clean your device. Clean only with dry cloth. Always disconnect this device from the power source before cleaning.
- Refer all servicing to authorized repair centres only. Do not attempt to repair this device yourself. Doing so may result in electric shock and will void the warranty.
- Keep this manual in a convenient place for future reference.

SPECIAL NOTE REGARDING USE OF THIS DEVICE IN A VEHICLE

- We strongly advise against the **driver** of a vehicle using this device, whilst moving.
- Most countries and states have laws which prohibit or severely restrict the use of this device in vehicles while driving, where the **driver** can see the screen. Please adhere to these laws.
- Do not leave this device in places where the temperature is extremely low (about -10°C or lower) or extremely high (about 50°C or higher), such as inside the passenger cabin or trunk in midsummer.
- Always switch the engine on before connecting power via the car power cable.
- Always disconnect the power from this device before switching off the engine.

Contents

Product Definition	8
Package Contents.....	9
X-Premium (X1/X2).....	9
X-Premium (X1+X2)	10
Detailed Specifications.....	11
Media Support List	13
USB Format:.....	13
DVD Format:.....	13
Product Overview.....	14
Player.....	14
Stanchion Mount.....	15
Remote Control.....	16
Functions Overview	16
Replacing the Battery	16
Getting Started.....	17
Installing X-Premium in Vehicle.....	17
Basic Connection	20
Turning the Power On/Off	21
Turn the Power On.....	21
Turn the Power Off.....	21
Making Connection	22
Insert the DVD Disc	22
Connect to HDMI Input Source.....	23
Insert USB Flash Drive	23
Connect Headphones	23
Monitor Sharing	24
Screen Mirroring With Your Smartphone	26
Using the X-Premium	29
Navigating the Home Screen	29
Adjusting the Volume Level.....	30
Adjusting the Screen Brightness	30
Media Playback.....	30

Using the DVD Player (X1 Model Only).....	31
Using the Media Menu.....	32
Accessing Apps.....	36
Configuring the System Settings.....	37
Launcher Setting	38

Product Definition

“X-Premium” is the newest technology Rear Seat Entertainment (RSE) product. It conforms with the ECE R21/R17 quality certification that ensures you a safe and secure entertainment experience.

There are two models of “X-Premium”, X1 and X2. The major difference between those models is that X1 is equipped with a DVD player while X2 does not include a DVD player. “X-Premium” can be used either as a standalone device or a combination of two devices.

For more details, please check the table below:

Model Name	X1	X2
Functions Description	<u>1.Input:</u>	<u>1.Input:</u>
	DVD(Disc)	N/A
	HDMI_IN	HDMI_IN
	USB_Media	USB_Media
	WIFI Sharing(Mirroring)	WIFI Sharing(Mirroring)
	<u>2.Output:</u>	<u>2.Output:</u>
	IR_EARPhone	IR_EARPhone
	Audio EARPhone Jacker	Audio EARPhone Jacker
	Speaker (max 1.5W)	Speaker (max 1.5W)
	<u>3.Tablet PC</u>	<u>3.Tablet PC</u>
Paired Combination	X1+X1, X1+X2, X2+X2	

 
Note:

- ◆ Please check the Instruction Manual based on the product that you have purchased. For the combination set, we use X1+X2 as an example.


Package Contents

The following items come with your package. If any of them is missing, please contact your local dealer.


X-Premium (X1/X2)

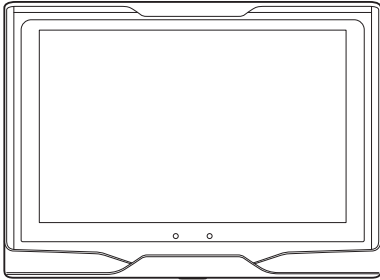


Player

 

Stanchion Mount

 

Remote Control

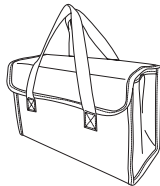 

Carrying Bag



T-cable 1



T-cable



Quick Start Guide



Cigarette Charger

 
 


Cable Lock
For X1 only




Hex Key L-wrench


X-Premium (X1+X2)

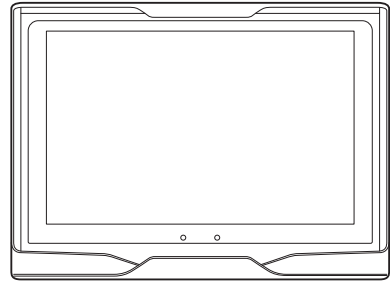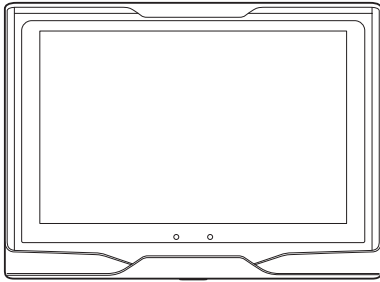


Players

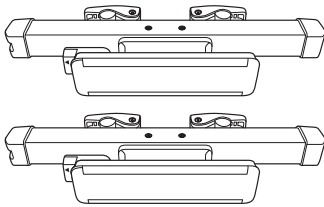 


Stanchion Mounts

 

Remote Control

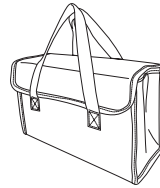 

Carrying Bag

 

Quick Start Guide



T-cable 1



T-cable 2



T-cable 3



Cigarette Charger



Cable Lock



Hex Key L-wrench

Note:

- ◆ *The actual products might appear slightly different from illustration shown above.*
- ◆ *The X1+X2 could be also a combination of X1+X1 or X2+X2.*

Detailed Specifications

Item		Description	
		X1	X2
Panel	Display	10.1" Active Matrix Color TFT LCD	10.1" Active Matrix Color TFT LCD
	Aspect Ratio	16:9	16:9
	Resolution	1280 x 800	1280 x 800
	Luminance	200nits (typical)	200nits (typical)
DVD	Supported Disc	DVD, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-R DL, DVD-RW DL, VCD2.0, SVCD, CD, CD-R, CD+R, CD-RW, CD+RW	N/A
	Supported Format	DVD-Video Navigation Ver1.0, VCD Ver1.0/2.0, SVCD, D-DA, Data (MP3, JPEG, MPEG 1/2)	N/A
USB	Version	USB 2.0 (Media Play)	USB 2.0 (Media Play)
	File System	FAT, FAT16, FAT32	FAT, FAT16, FAT32
	Charging	5V/2A	5V/2A
HDMI Input		HDMI Type A: HDMI 1.4	HDMI Type A: HDMI 1.4
Speaker	Maximum Output	<ul style="list-style-type: none"> • 2W (maximum) • 1.5W (typical) 	<ul style="list-style-type: none"> • 2W (maximum) • 1.5W (typical)
Remote Control Key Support (14-key RC)		NEC Format	NEC Format
Operating Voltage		12V (Car charger or DC jack)	12V (Car charger or DC jack)
Operating / Performance Temperature		-5°C to 50°C	-5°C to 50°C

Item	Description	
	X1	X2
Function Temperature	-5°C to 50°C functional but may not meet specifications (any deviations must be recoverable)	-5°C to 50°C functional but may not meet specifications (any deviations must be recoverable)
Storage Temperature	-20°C to 60°C	-20°C to 60°C
Housing Dimension	267 x 195 x 32 mm	267 x 195 x 32 mm
Unit Weight	1.750 kg	1.750 kg

Media Support List

USB Format:

Video

Format	Support
• FLV	• H.263
• MP4	• H.264
	• FLV
	• MPEG1/2/4

Music

Support
• MP3

Photo

Support
• JPEG
• BMP

DVD Format:

Support
• MPEG: MPEG-1 (ISO/IEC 11172-2)
• MPEG-2 (ISO/IEC 13818-2)
• MPEG-4 ASP(Xvid/DIVX)
• VOB (DVD): 720 x 480i, 720 x 576i, 720 x 480p, and 720 x 576p)
• DVD Music: CD/MP3
• DVD Photo: JPEG

 
Note:

- ◆ *The DVD player supports DVD-Video Navigation Ver1.0, VCD Ver1.0/2.0, SVCD, D-DA, Data (MP3, JPEG, and MPEG 1/2).*

Product Overview

Player


X1 Front Panel

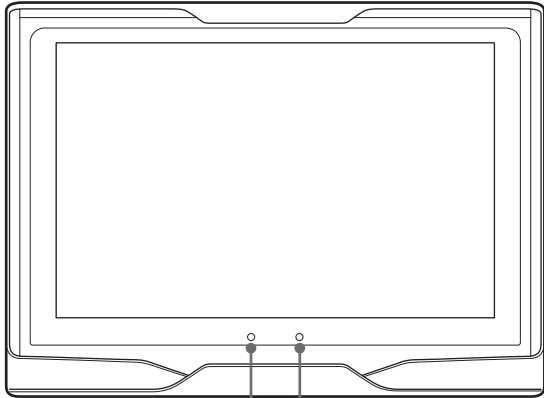

0.3MP Camera 2MP Camera

- ● Volume (up) key
- ● Volume (down) key
- ● Power key

 
X2 Front Panel

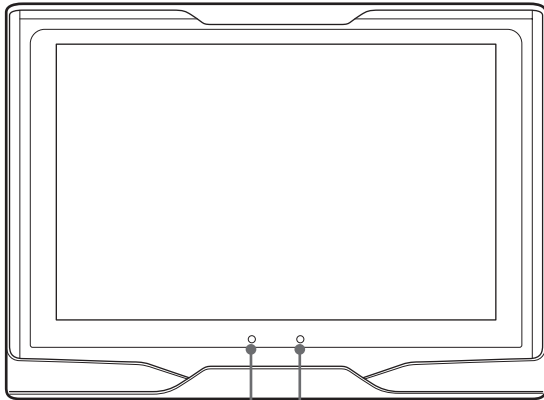


0.3MP Camera 2MP Camera

- ● Volume (up) key
- ● Volume (down) key
- ● Power key

 
X1 Rear Panel

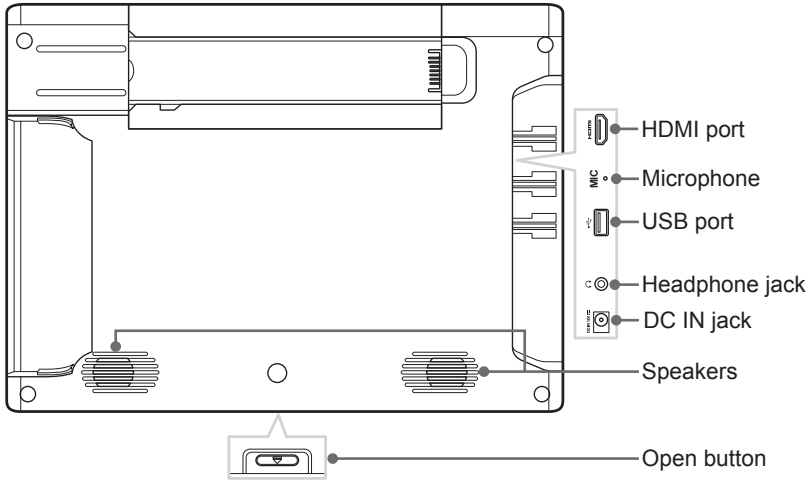

X2 Rear Panel

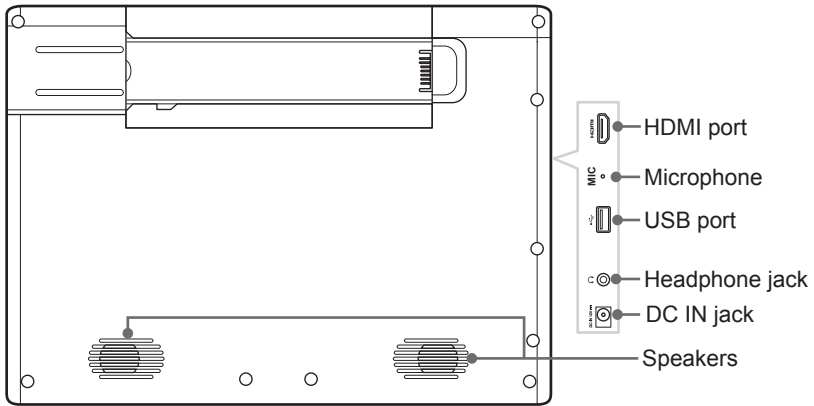 


Stanchion Mount

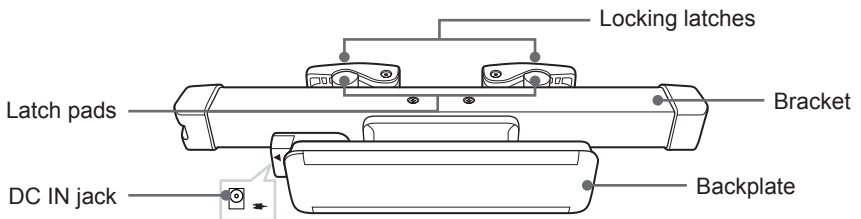 


Remote Control

 Functions Overview

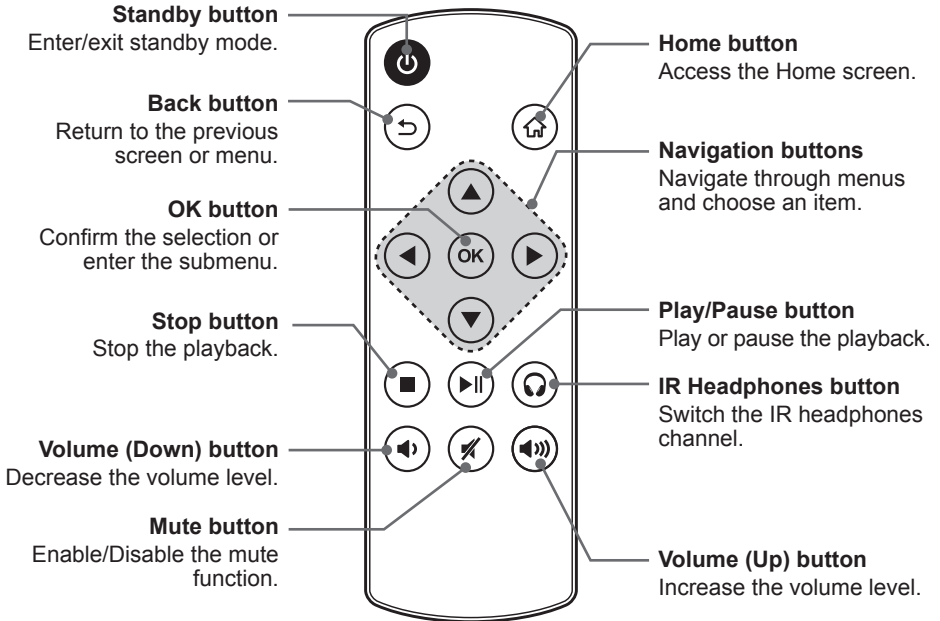


Replacing the Battery

 
1 Press firmly the latch and pull out the battery holder.

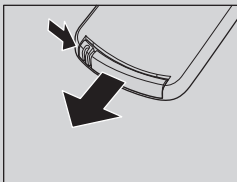

 2 Remove the old battery and insert a new lithium coin battery (CR2025) into the battery holder with the positive side (+) facing up.

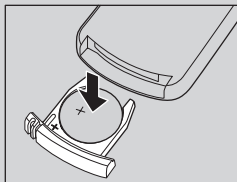

 3 Install the battery holder back into its slot.

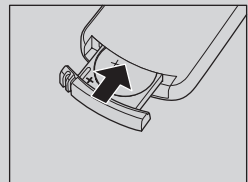

Note:

- ◆ Remove the battery from the remote control when not in use for extended periods of time to prevent possible battery leakage.

Getting Started


Installing X-Premium in Vehicle

This device is specifically designed to be mounted behind the driver and/or passenger seat(s).

- 1 Remove the headrest(s) and carefully route the cable(s).


For X1/X2

 Route the T-cable into the hole of the pole on the seat.

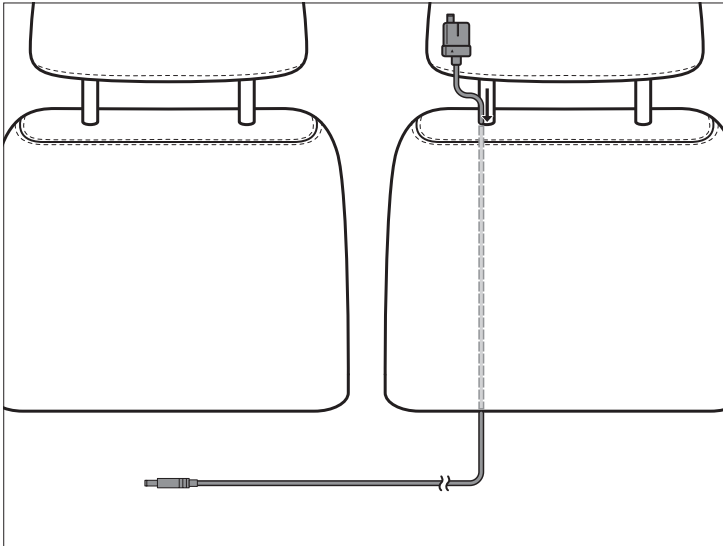


For X1+X2

 Route the T-cable 2 and T-cable 3 into the holes of the poles on each side of the seat. Then from the bottom of the seat, connect both ends of the T-cable 2 and T-cable 3 to the T-cable 1 connectors.


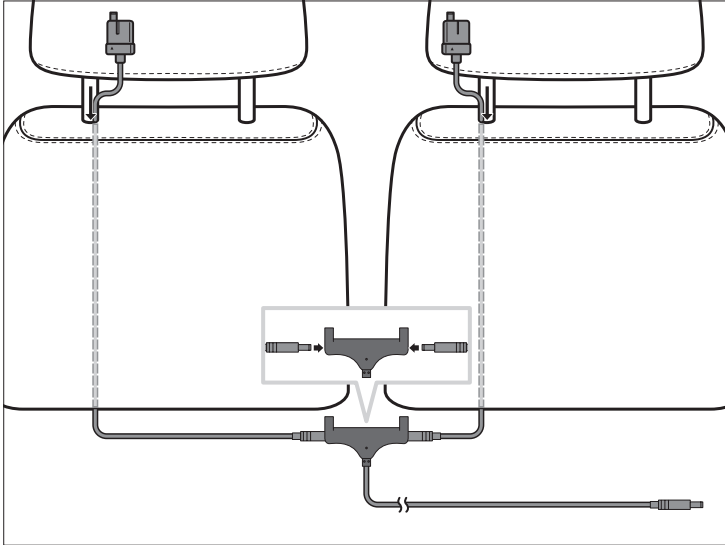


2 Replace the headrest(s) into place.

 
3 Remove the screws to release both locking latches on the stanchion mount.

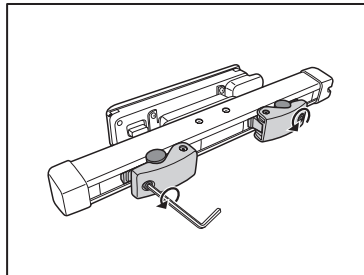

  
- 4** Position the bracket on the bars of the headrest. Fasten the screws on both locking latches to fix the bracket firmly on the bars.

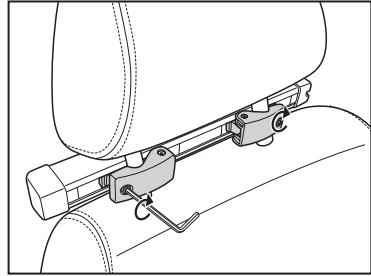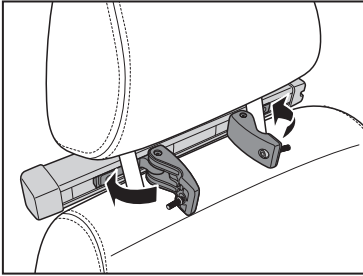

 
- 5** Connect the player with the AV/Power cable (one end of the car power cable) as shown in the following illustration.

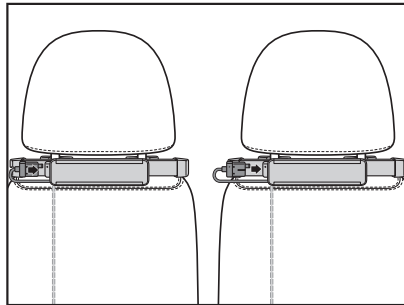

 - 6** Slide the mount slot of the player into the backplate of the stanchion mount fully until it clicks into place.

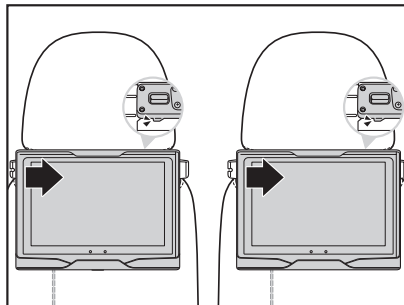


 7 Adjust the player to the desired viewing angle.

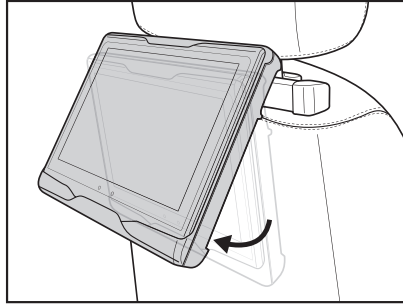


Note:

 - ◆ To remove the player from the stanchion mount, pull and hold the release latch upwards and then slide the player off to disengage the connection.

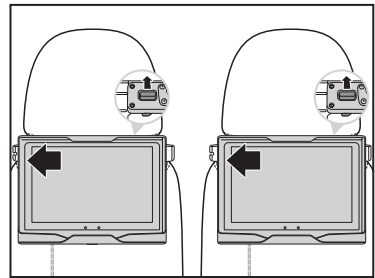

Basic Connection

 For proper connection method, refer to the illustration below.

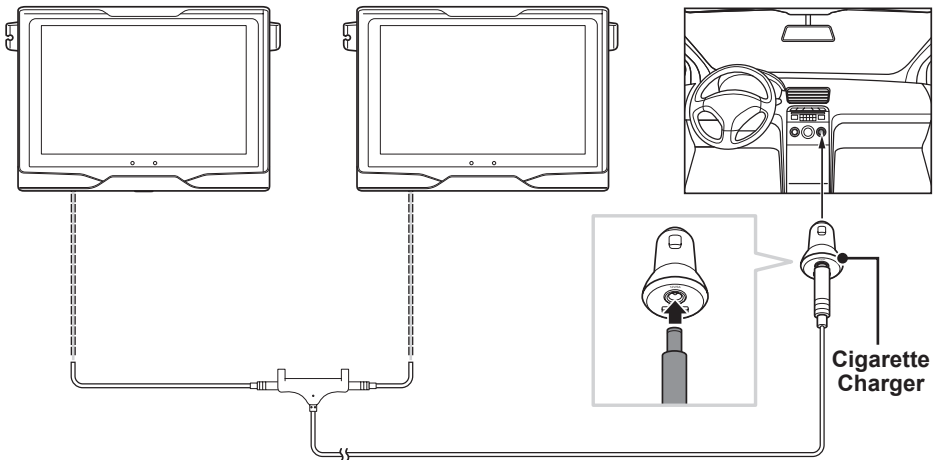


Turning the Power On/Off


Make sure the cigarette charger is properly connected to the cigarette lighter socket of your vehicle.

Turn the Power On

 Press the  key on the player to turn this device on.

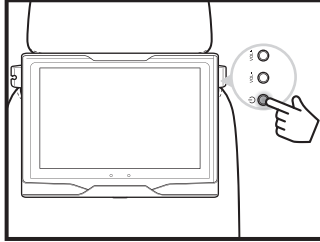


Note:

- ◆ Press the  button on the remote control to allow the device to enter or to exit the standby mode.

 
Turn the Power Off

Press and hold the  button on the side of the unit for at least 2 seconds to

1 Press and hold the  key on the player for at least 2 seconds until you see the power options on the screen.

2 Select **Power off**.

The player will shut down.

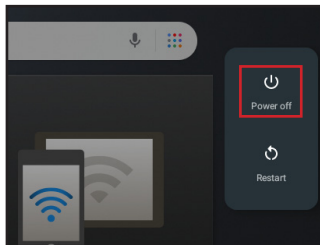

Note:

- ◆ To simply restart the player, select **Restart**.

Making Connection

 
This section guides you on how to insert a DVD disc and connect your X-Premium to an external device.

Note:


- ◆ Do not unplug the USB flash drive or disconnect the cable connection during the file playback.

Insert the DVD Disc

1 On the player, press the **Open** button and carefully open the disc cover.

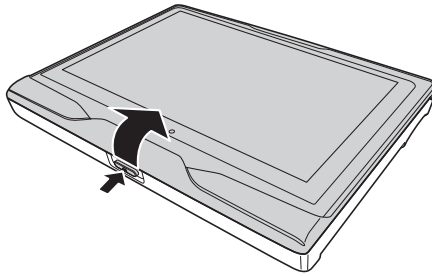

 2 Place the disc in the compartment with the label facing up. Make sure that it is completely seated in the indent.

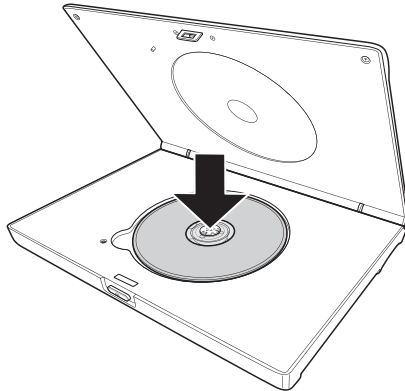


3 Close the disc cover by gently pressing until it clicks into place.

Connect to HDMI Input Source


You can use this device to play your favorite multimedia content (videos, pictures, and music) from your portable device (i.e. smartphone or tablet).

 - 1 Connect one end of the HDMI cable to the HDMI port of the player.
- 2 Connect the other end of the HDMI cable to the HDMI port of the portable device.

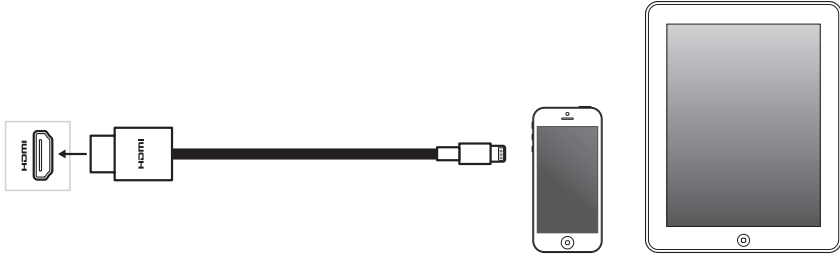

Insert USB Flash Drive

 You can also use this device to play your files stored in the USB flash drive. Simply plug in the USB flash drive to the USB port of the player.




Note:


- ◆ To copy your favorite multimedia files, plug in the USB flash drive into your computer USB port and transfer the files to the root directory of the USB flash drive.

 
Connect Headphones

X-Premium is equipped with built-in speakers. However, you may also use a set of headphones for personal listening. To use headphones, just plug in your headphone cable into the headphone jack of the player.






With the built-in IR transmitter, you can use wireless headphones. When the IR headphone is connected to the player, you can select the channel IR Channel A or IR Channel B by simply pressing the  button on the remote control.

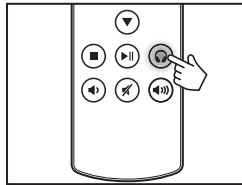 Press the  button repeatedly to toggle the IR headphones channel.




Note:

- ◆ When the headphones are connected, the speakers of X-Premium will be muted.
- ◆ When the IR headphones are connected, the built-in speakers are not muted. To adjust the volume level of the speakers, do the following:
 - ⇒ On the player, you can adjust the volume level by pressing the **VOL-** or **VOL+** key on the device or pressing the volume button ( or ) on the remote control. To mute the speakers, press the  button on the remote control.
- ◆ To avoid hearing damage, it is highly recommended to set the volume level to its minimum level first before plugging in the headphones.


Monitor Sharing

With this function, you can configure both players to play the same media content simultaneously.

 
1 On the receiver player, tap **Receiver** in **Home screen > Mirror** menu.

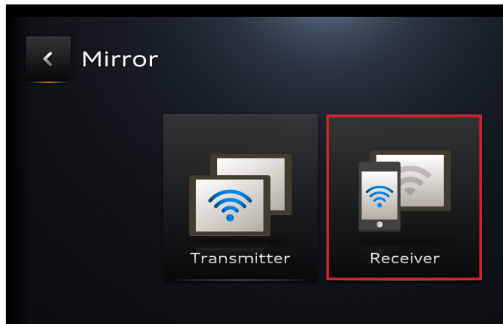


2 Tap Listen.

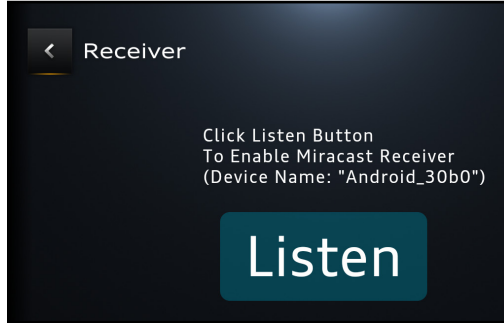 

 
“Waiting for connection invitation from other devices.” note appears on the screen of the receiver player.

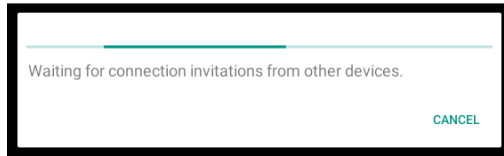

 3 On the transmitter player, tap on the name of the receiver player (for example, **Android_30b0**) on the **Home screen > Mirror > Transmitter > Screen Output** menu.

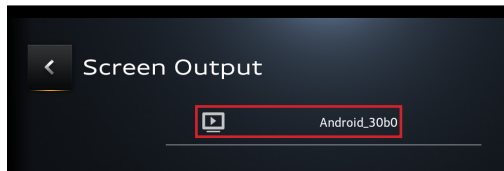

 
4 Tap **CONNECT** to confirm mirroring the screen.

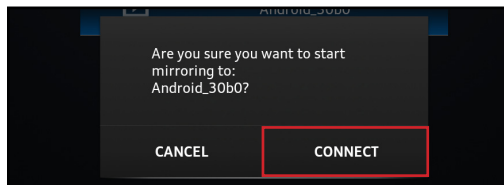


5 On the receiver player, tap **ACCEPT** to confirm the mirroring request.



 Both players will display the same screen.

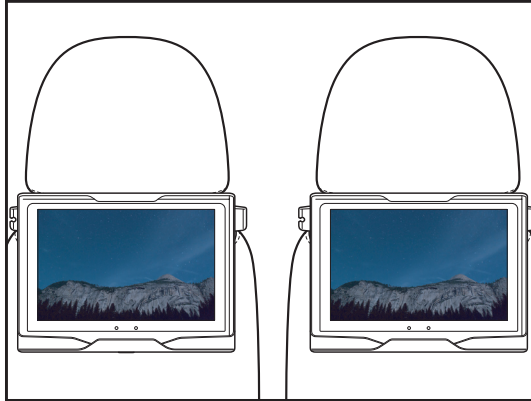

 
6 To finish mirroring the screen, on the transmitter player, tap **DISCONNECT** at the **Home screen > Mirror > Transmitter > Screen Output** prompt.

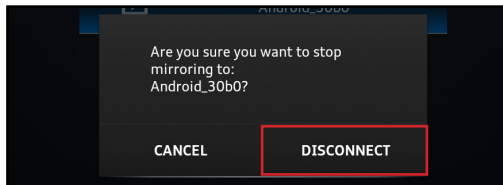


Screen Mirroring With Your Smartphone

With this function, you can mirror the content from your Android portable device (i.e. smartphone or tablet) to your player wirelessly.

 
- 1** Connect your portable device to the Wi-Fi network.
- 2** Connect your player to the same Wi-Fi network with your portable device.
- 3** On the player, tap **Receiver** in **Home screen > Mirror** menu.

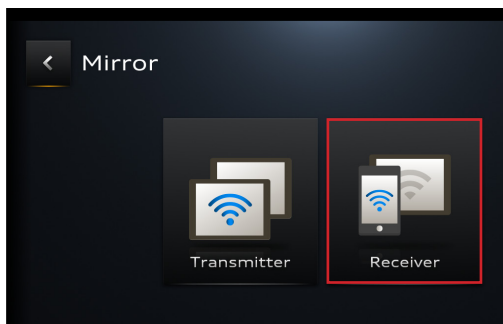


4 Tap Listen.

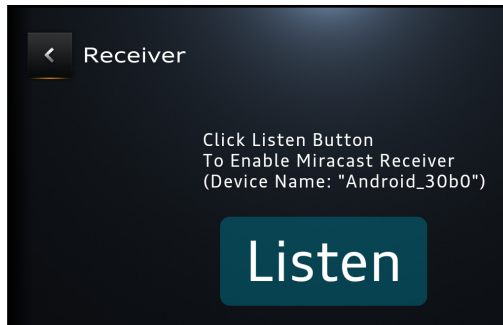 

 “Waiting for connection invitation from other devices.” note appears on the screen of the player.

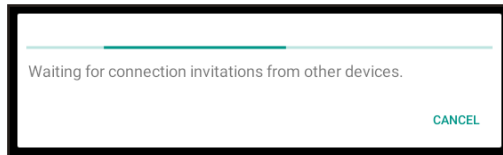

 
5 On your portable device, enable the “Cast” function. Then tap on the player name.

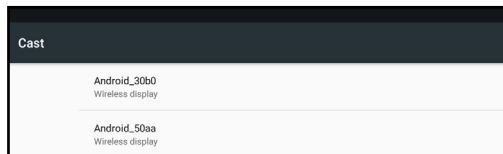

6 On the player, tap **ACCEPT** to confirm the mirroring request.



 
Once connected, your smartphone display will be mirrored on the screen.

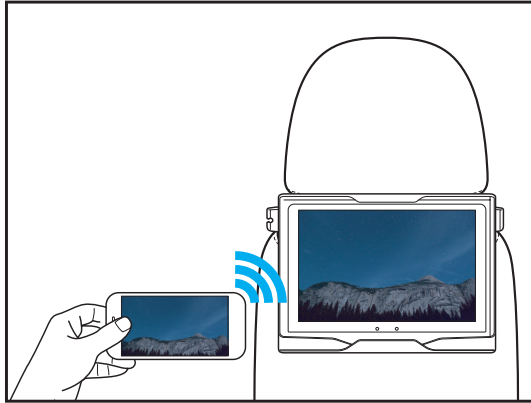

Note:

- ◆ *The screen mirroring is not supported in iOS devices.*
- ◆ *The available “Cast” function may vary depending on the device UI.*

 
7 To finish mirroring the screen, on your portable device, tap on the player and then tap **DISCONNECT**.

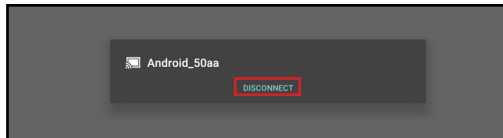

Using the X-Premium

Navigating the Home Screen

 
After powering on the player, you will see the Home screen. The Home screen shortcuts slightly vary depending on the model.

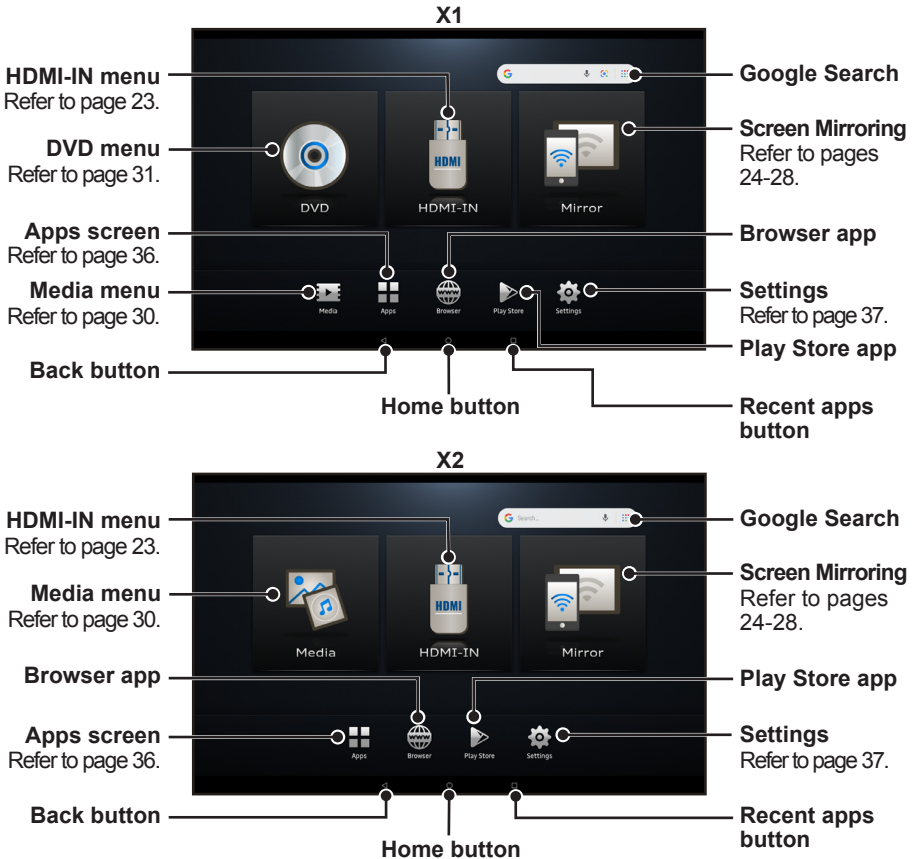

Note:

 
- ◆ Touch any of the following icons on the Home screen to:
 - ◀: Return to the previous screen.
 - ○: Return to the Home screen.
 - ◻: View and control recently opened apps.
- ◆ Use **Browser** app to visit web pages.
- ◆ Use **Play Store** app to search and download apps to the player.
- ◆ If the Home screen is not the default screen after powering on the device, refer to page 38.

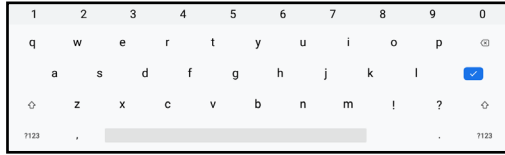

- ◆ When you need to input data, the on-screen keyboard opens automatically.



 Adjusting the Volume Level

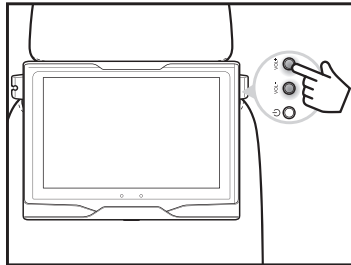To adjust the volume level, do the following:

 


- Press the  button on the remote control or press the **VOL-** key on the player to decrease the volume level.
- Press the  button on the remote control or press the **VOL+** key on the player to increase the volume level.

Adjusting the Screen Brightness

To adjust the screen brightness, perform the following:

- 1 Swipe the screen from up to down to open the Android Quick Settings menu.

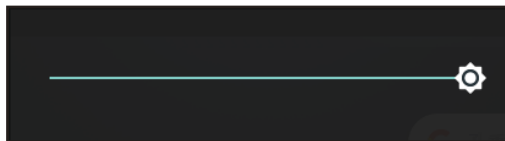

- 2 Drag the slider bar to the left to decrease the brightness or to the right to increase the brightness.

Media Playback

The X-Premium enables you to play multimedia files from various sources: DVD (X1 model only), HDMI or USB devices, Internet, and directly from a remote device through screen mirroring.

 
Using the DVD Player (X1 Model Only)

To play media content saved to a DVD, perform the following:



- 1 Place a DVD disc to the player. Refer to page 22.
- 2 Tap **DVD** on the Home screen. The DVD playback starts automatically.
- 3 During the playback, tap anywhere on the screen to view and access the playback controls:


Note:

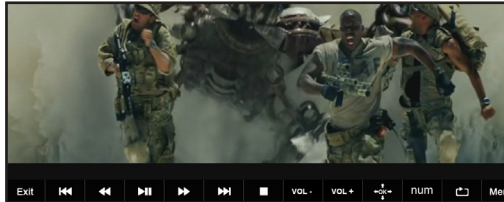


- ◆ *Swipe the screen to the left to access more playback controls.*
- ◆ *To hide the playback control bar, tap on the screen or wait until it disappears automatically after a period of time.*
- ◆ *Swipe up on the screen to increase the brightness or swipe down to decrease the brightness.*



 - **Exit:** Close the DVD player and return to the Home screen.
- **⏮:** Rewind to the beginning of the chapter/track.
- **⏪:** Set the playback rewind mode or tap to zoom out on the image. For the rewind mode, tap repeatedly to toggle between 2 times, 4 times, 8 times, 16 times, or 32 times. Tap **⏩** to return to the normal playback.
- **⏸:** Pause or play the disc playback.
- **⏭:** Set the playback fast forward mode or tap to zoom in on the image. For the fast forward mode, tap repeatedly to toggle between 2 times, 4 times, 8 times, 16 times, or 32 times. Tap **⏸** to return to the normal playback.
- **⏭:** Skip to the next chapter/track.
- **■:** Stop playing the disc.
- **VOL-:** Decrease volume level.
- **VOL+:** Increase volume level.
- **⏮/⏭:** Tap on the arrows to move to the left, right, up, or down on a zoomed image. Tap **OK** to confirm.
- **Num:** Enter numbers from **0** to **9**. Tap **OK** to confirm.

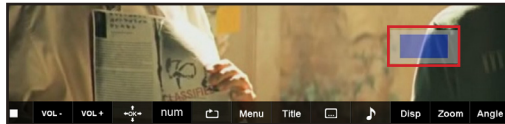- : Set the playback repeat mode. Tap repeatedly to toggle between:
 - For DVD: **CHAPTER**, **TITLE**, or **ALL**.
 - For CD/VCD: **TRACK** or **ALL**.
 - For MP3: **SHUFFLE**, **SINGLE**, **ONE**, or **FOLDER**.
- **Menu**: Return to the DVD root menu or to the VCD PBC menu.
- **Title**: Select a subtitle language programmed on the DVD (if available).
- : Select one of the audio sound tracks on the DVD (if more than one is available) or select the audio output mode on the CD.
- **Disp**: Display the playtime and status information.
- **Zoom**: Zoom in or zoom out on the screen image. Tap repeatedly to toggle between:
 - For DVD/VCD: 2 times, 3 times, 4 times, 1/2 times, 1/3 times, 1/4 times, or normal size. The zoomed area is displayed as a blue box for reference on the bottom right corner of the screen.

 



- For JPEG: Tap **Zoom** and then tap  or  to zoom out or zoom in respectively. Tap  to move around the zoomed area.
- **Angle**: Set the viewing angle (if available).

Using the Media Menu

To play media content from the internal memory of the player or from an attached storage device, perform the following:

 - 1 On the Home screen, tap **Media**.
- 2 Tap on your preferred media category: **Videos**, **Music**, or **Photos**.

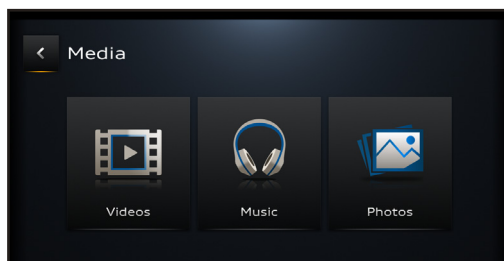


- 3 Tap  to return to the previous screen.

Playing Videos


To play videos, perform the following:

 - 1 In Videos menu, swipe the screen to the left or to the right to select your preferred video. Then tap on the video to play it.

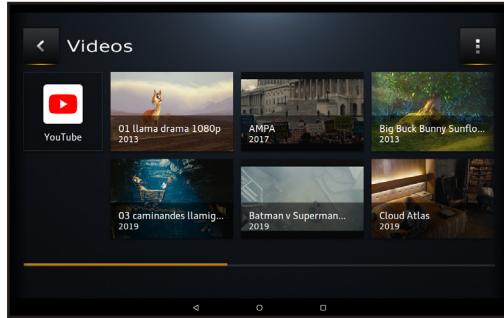




The video playback starts automatically.

Note:

- ◆ Tap **YouTube** to play videos from YouTube.
- ◆ Tap  to open the help center and add or remove app shortcuts.

- 2 During the playback, tap anywhere on the screen to view and access the playback controls:

Note:

 
- ◆ *Swipe down on the screen to open the volume adjustment bar and then adjust the volume level.*
- ◆ *To hide the playback control bar, tap on the screen or wait until it disappears automatically after a period of time.*
- : Pause the playback.
- : Play the playback.
- : Close the playback window.

Playing Music

To listen to the music, perform the following:

- 1 In the Music menu, tap any of the following to select track:
 - **Music:** Search for music by **Artists, Albums, Songs, Playlist**, or switch to **Now Playing**.
 - **Shuffle play:** Play all tracks in shuffle mode.
 - **Albums:** View and play tracks in albums.

- **Genres:** View and play tracks by genres.
- **Artists:** View and play tracks by artists.
- **Tracks:** View all tracks.

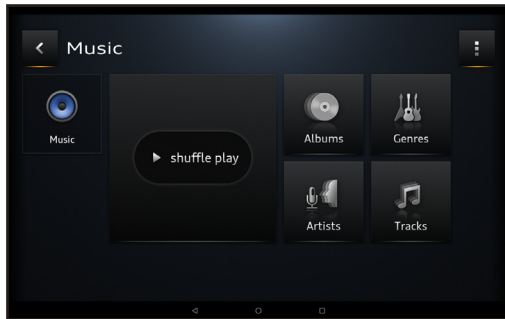







 

 





After you have selected the track, tap on it to start the playback.

Note:

- ◆ Tap  to open the help center and add or remove app shortcuts.

 
2 During the playback, tap anywhere on the screen to view and access the playback controls:

Note:

- ◆ *Swipe down on the screen to open the volume adjustment bar and then adjust the volume level.*
- ◆ *To hide the playback control bar, tap on the screen or wait until it disappears automatically after a period of time.*
- : Adjust the volume level.
- : Skip to the previous track.
- : Pause the playback. Tap  to resume the playback.
- : Skip to the next track.
- : Set the playback repeat mode. Tap repeatedly to toggle between repeat all tracks , repeat the current track , and turn off repeat .
- : Shuffle tracks. Tap repeatedly to toggle between shuffle  and shuffle off .
- : Enable equalizer and configure its parameters.
- : Close the playback window.

Note:

- ◆ You can control the music playback also in Android Quick Settings menu. Simply swipe the screen from up to down and use the playback controls directly or tap on the track to access the Now Playing menu.

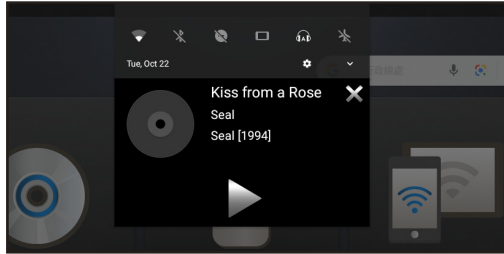**Viewing Photos**

To view photos, perform the following:

- 1 In the Photos menu, select the album or photo that you want to view.


**Note:**

 - ◆ Tap  to open the help center and add or remove app shortcuts.

 

Accessing Apps

A complete list of all apps that are installed on the player, can be viewed and accessed on the Apps screen. To open the Apps screen, perform the following:


1 On the Home screen, tap **Apps**.

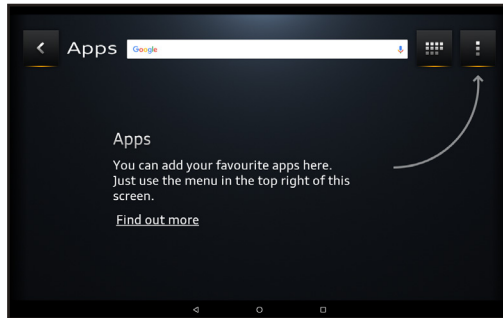




2 Do any of the following:

- : Perform Google Search.
- : Tap to access the apps list.

 Swipe the screen to the left or to the right to access more apps.

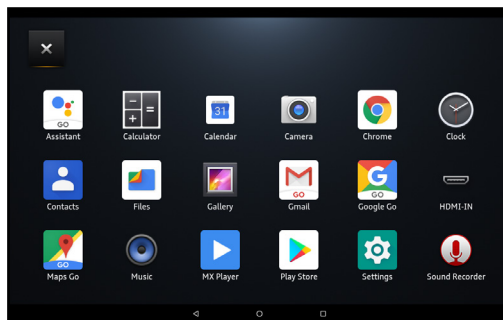
- Tap on the app to open it.
- Tap  to close the apps view.



- : Tap to open the help center and add or remove app shortcuts.
- : Tap to return to the previous screen.

Configuring the System Settings

 To access the Settings menu, tap **Settings**  on the Home screen.

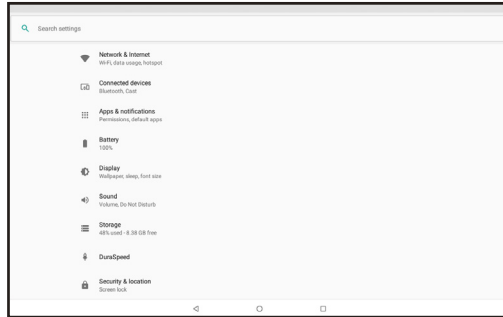

The system settings are described in the following table:

Menu Option	Description
Network & Internet	Configure the Wi-Fi settings, view data usage, configure hotspot and tethering settings, setup Virtual Private Network (VPN), and enable airplane mode.
Connected devices	View and configure how other devices can connect to the player.
Apps & notifications	View apps information, configure notifications, set apps permissions, and more.
Battery	View battery information and configure power settings.
Display	Configure the display settings and set the Home screen wallpaper.
Sound	Configure sound settings.
Storage	Manage the storage.
DuraSpeed	Set restrictions to the background apps.
Security & location	Configure security and privacy settings.
Users & accounts	Manage user accounts and enable or disable to sync data automatically.
Accessibility	Configure accessibility options.
Google	Manage your Google account.
System	Configure system settings and backup settings, update the system, reset all system settings to the factory defaults, and more.

 
Launcher Setting

IMPORTANT!

- ◆ *If you upgrade the system or reset all the settings to the factory defaults, follow the steps in this section to set the device back to the original operation interface (launcher).*


Step 1: After system upgrade or reset:

- Start the device to open the Google Default Launcher.

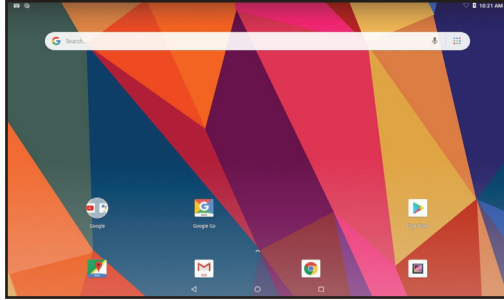


Step 2:

 - Tap **Settings** to open the Settings menu.
- Tap **Apps & notifications**.

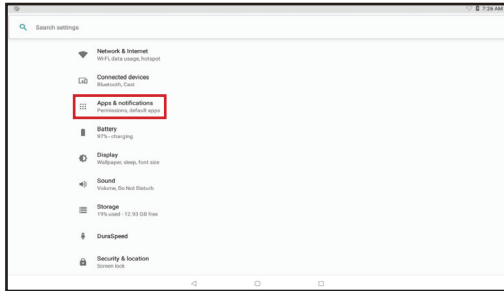


Step 3:

 - a) Tap **Advanced > Default apps** to access the default apps configuration menu.

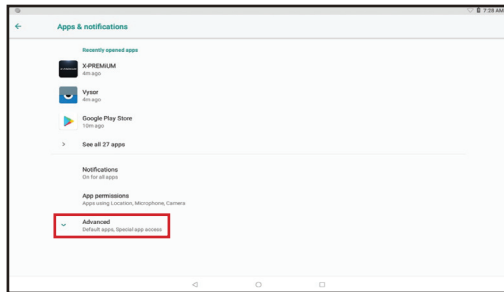**Step 4:**

 - a) Tap **Home app** to set the default startup app.

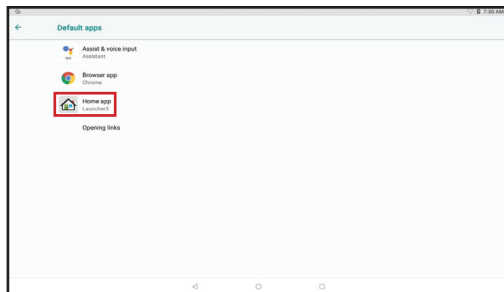**Step 5:**

- a) Tap **X-PREMIUM** to set it as the default startup app.
b) Close the Settings menu.



Step 6: The Home screen opens automatically.



Note:

- ◆ *The next time you start the device, the Home screen is opened automatically until you upgrade or reset the system again. After the next upgrade or reset, please follow the steps in this section to set the default startup app.*
- ◆ *For navigating the Home screen, refer to page 29.*